



HINDLE PRODUCTS LTD.

140 North Port Road
Port Perry, Ontario
L9L 1B2, CANADA

Tel. (905) 985-6111 | Fax. (905) 985-7349




General Mounting Instructions for OFF-ROAD/MX/ATV FULL SYSTEMS

Thank you for investing in a Hindle Exhaust System. Performance, quality and sound is what we're all about - below you will find general instructions to mount a full Hindle exhaust system. These are general guidelines, since most motorcycles generally have similar components. Should there be any additional model specific instructions, these can be found as supplementary instructions, or on our web site. Should you have any questions about installation, please do not hesitate to contact us and we would be happy to help out.

TOOLS REQUIRED:

| | |
|------------------------------------------|-------------------------------------|
| High temperature silicone (not included) | Spring installer tool (included) |
| Metric Socket set (not included) | Metric Allen Key set (not included) |
| Metric Wrench set (not included) | |

1. Read instructions before installing exhaust system.
2. Remove stock exhaust system as per owner's manual.
3. Using a new gasket (not included), install flange onto motor.
4. Observe position of spring holes on flange in the general diagram below.
5. Tighten flange nuts finger tight. Hang spring from hole on bottom of flange.
6. Check that spring on flange lines up with spring tab on primary tube.
7. Use high temperature silicone sealant on the inside of primary tube to install it onto the flange.
8. Push primary all the way into flange.
9. Tighten flange nut. Do not over tighten and bend flange.
10. Install spring onto primary spring tab using spring tool provided with system.
11. Install elbow on primary using 2 springs with spring tool.
12. Slide muffler over top of elbow. Use small amount of sealant on the inside of the muffler.
13. Install muffler clamp. Make sure muffler and elbow are not pushing exhaust system down into fairing, radiator, wires, oil lines or swing arm. Install spring from muffler to elbow.
14. Start the motorcycle and check for exhaust leaks. If exhaust leaks, re-install.
15. Re-install fairings and check for adequate clearance.
16. After test ride, check fairing, radiator, wires, oil lines and swing arm clearance. Re-adjust if necessary.
17. To remove Hindle exhaust system use WD40 on slip-joints to help removal. Gently work joints apart.
18. Enjoy the added performance of your new Hindle Exhaust System!

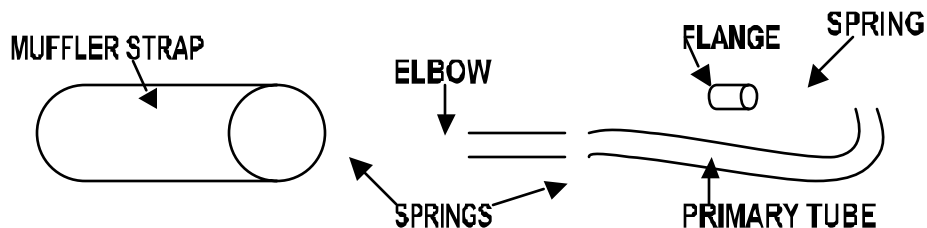

12 MONTH LIMITED WARRANTY AND LIABILITY DISCLAIMER

Hindle Products Ltd. warrants this product free from defects in material or workmanship for a period of 12 months from the date of purchase, except as noted. The product warranty does not cover damage caused by misuse or abuse; accident; the attachment of any unauthorized accessory; alteration to the product, improper installation, exposure to harsh weather and/or chemicals, lack of proper maintenance, or any other conditions that are beyond the control of Hindle Products Ltd. Hindle Products Ltd. shall not be responsible for any type of incidental, consequential, or special damages. All implied warranties, including but not limited to those warranties of fitness and merchantability, are limited in the total duration to 12 months from the original purchase date. Hindle will not warrant any product for fitment issues after the system has been ran on the motorcycle for any length of time. If the warranty occurs within 30 days from the date of purchase, please contact the dealer product was purchased from. Over 30 days from the date of purchase, please contact Hindle Products Ltd. direct at (905) 985-6111 before shipping the product. Customer must contact Hindle Products Ltd. prior to sending warranty product. Claims for lost shipment, damaged shipments, or other problems regarding freight must be made directly to the responsible carrier. To obtain warranty service on Hindle Exhaust System products, mail the product prepaid and a copy of your dated sales receipt (as proof of purchase), together with a note explaining the reason for repair to this item to: **Hindle Products Ltd., 140 North Port Road, Port Perry, Ontario, Canada, L9L 1B2.** Product being returned without notification prior to shipping will be overlooked. Upon receipt, Hindle Products Ltd. will repair or replace, as appropriate, your Hindle product and return it to you, post paid. Warranty is solely through Hindle Products Ltd. Service to our products by anyone other than Hindle Products Ltd. voids warranty. Hindle Products Ltd. disclaims any and all liability for consequential or incidental damages. Hindle Products Ltd. will not be held responsible for personal damage, bodily harm or any other legal matters.

CAUTION: Exhaust system(s) and muffler(s) may be hot when engine is/has been running. Take preventative measures with the handling of any Hindle system or Hindle muffler. Allow the engine to cool before installing or removing the exhaust system and/or muffler. Severe burns, bodily injury and/or death may occur. Keep flammable materials away from exhaust at all times. Start and run the motorcycle in a well-ventilated area. Failure to do so may cause injury, bodily harm and/or death.